



Move hood lid into workshop position.
 Remove or disconnect following parts:
 Inner wheel arch trim
 Front turn signals
 Front bumper
 Body moulding on side panel
 Trim on floor assembly
 Upper side panel edge guard


Unfasten screws on underside.

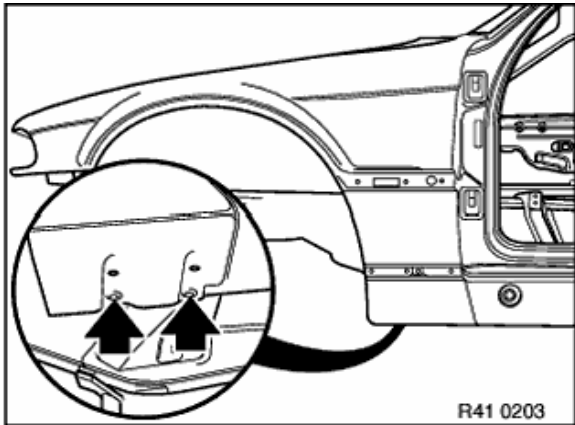


Unscrew screw.

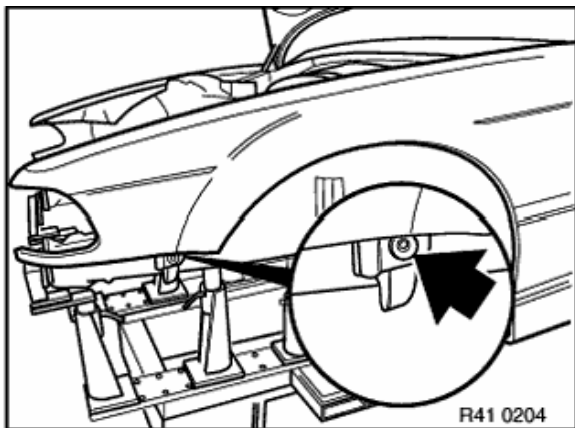

Open door.
 Unscrew bolts.

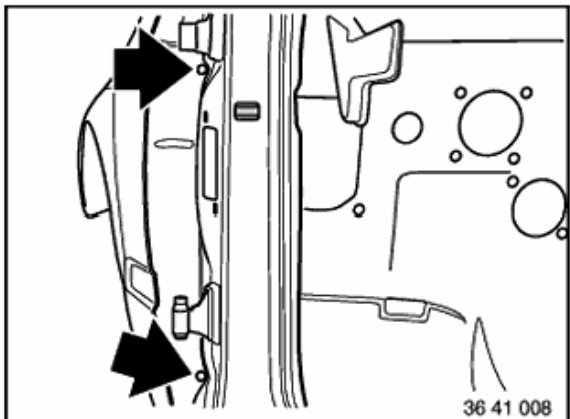

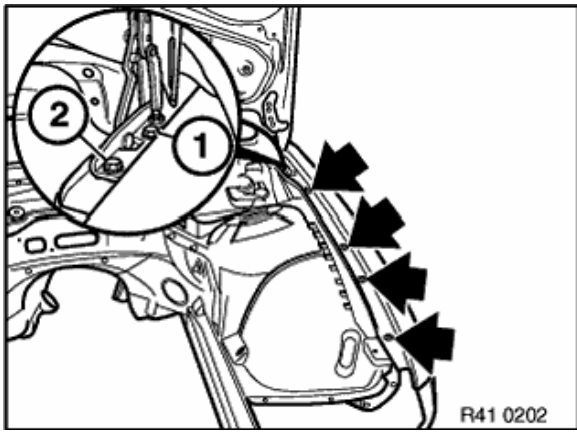

Unfasten upper retaining screws on side panel.

Secure hood lid in such a way that windshield and adjacent body sections are not damaged.

Remove screws (1 and 2).

Take off side panel.

Installation:

Fit in side panel and make sure of uniform spacing to door and engine hood.

Coat connection point with sealant (Sourcing Reference BMW Parts Service).

Check setting of hood lid check, adjusting hood lid if necessary.